
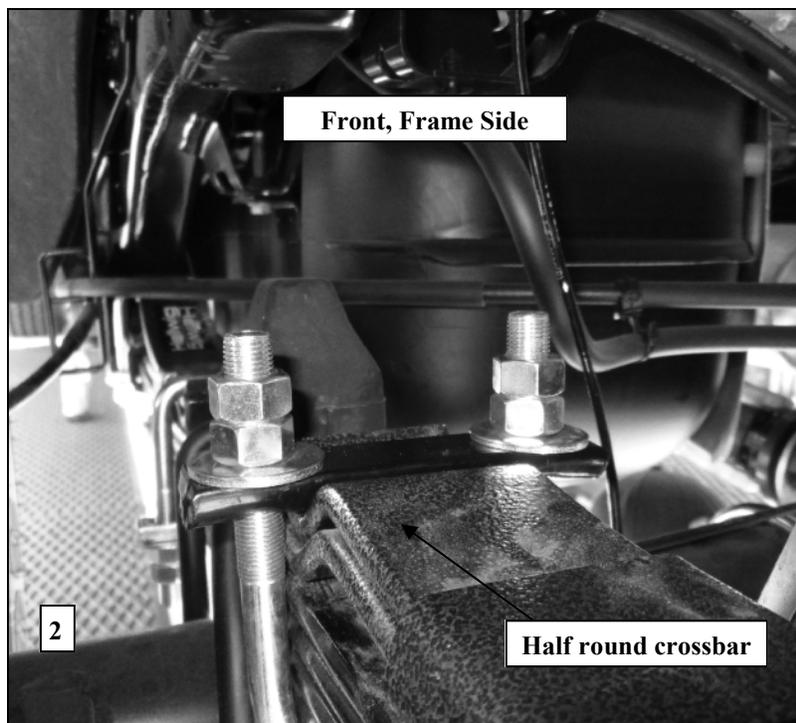


INSTALLATION INSTRUCTIONS

Thank you for purchasing a quality Hellwig Product.

PLEASE READ THIS INSTRUCTION SHEET COMPLETELY BEFORE STARTING YOUR INSTALLATION

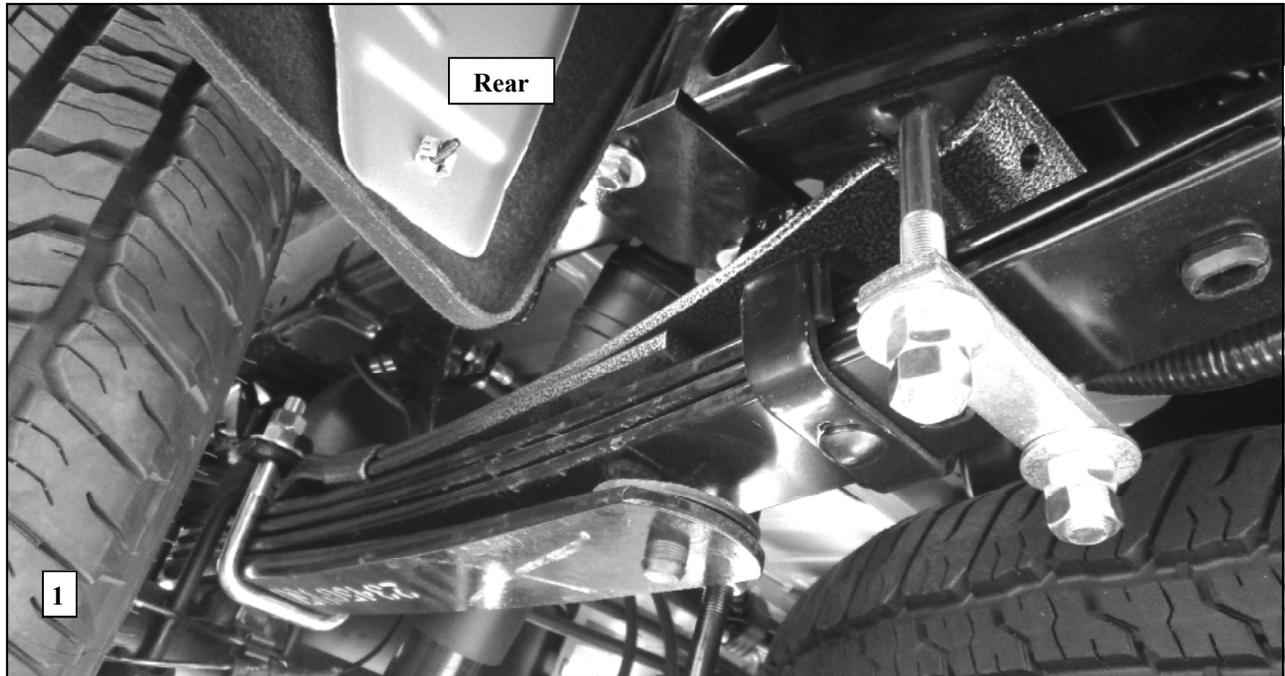

Hellwig PRODUCTS.com

559-734-7451 800-367-5480 TechSupport@HellwigProducts.com

1. Place the single leaf on the factory leaf pack behind the axle.
2. Place one of the half round crossbars in the spring cup closest to the axle. Run a u-bolt up through the cross bar and attach using washers and nuts as seen in Photos 1 and 2. Torque to 65 ft-lbs.
3. Place the remaining U-bolts in the rear cup with the legs facing down. Attach using the flat crossbars, washers and nuts as shown in Photo 1. Leave loose at this time.
4. Tighten the nuts on the U-bolt closest to the frame. The more you tighten them down, the stiffer the springs will be. Adjust them to your load and to level the vehicle and always leave a minimum 1/4" gap between the bottom of the Hellwig spring and the top of the factory leaf pack.
5. Double nut all the U-bolts after adjusting and torque to 65 ft-lbs.
6. Bounce the vehicle checking for clearance on all undercarriage components, brake lines, wiring, etc.
7. Drive the vehicle, double check the torques and check the install regularly thereafter.

IMPORTANT NOTE: This unit is designed to increase the level load carrying capacity of your vehicle. Never load the vehicle beyond the manufacturer's maximum gross vehicle weight rating.

NOTE: Your spring may have a small hole in the end, this is for our manufacturing process and will not be used.

NOTE: In some cases a dual Hellwig leaf is shown, you will only have a single leaf in your install.

ATTENTION INSTALLER: BE SURE THE CUSTOMER RECEIVES THIS INSTRUCTION SHEET, ALL IMPORTANT NOTE CARDS AND THE WARRANTY FORM.