



Hellwig PRODUCTS.com

559-734-7451 800-367-5480 TechSupport@HellwigProducts.com

INSTALLATION INSTRUCTIONS

Thank you for purchasing a quality Hellwig Product.

PLEASE READ THIS INSTRUCTION SHEET COMPLETELY BEFORE STARTING YOUR INSTALLATION

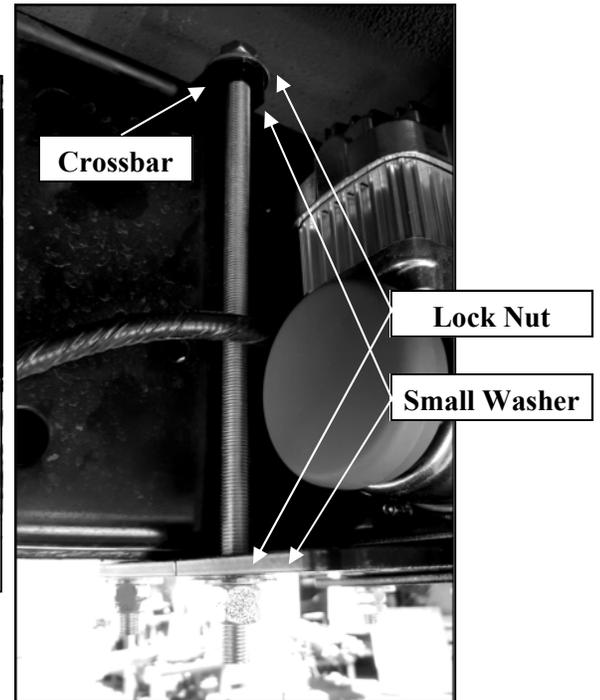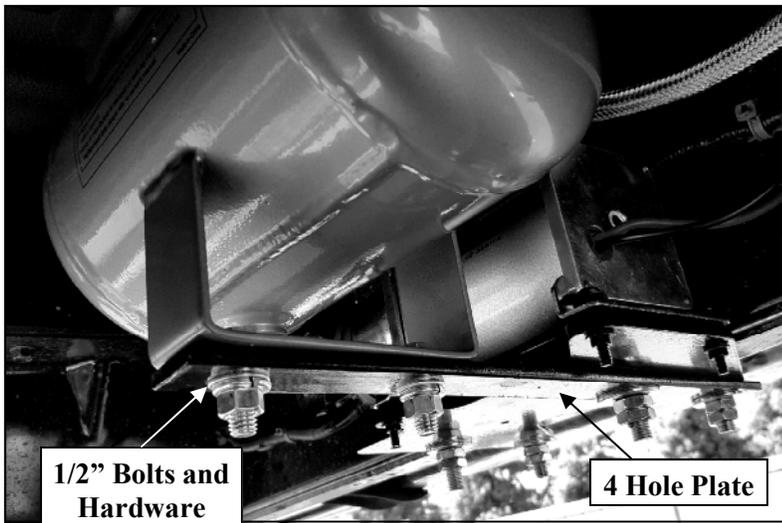

TORQUE TABLE

BOLT SIZE: 3/8" = 20-30 ft. lbs. – 7/16" = 35-45 ft. lbs. – 1/2" = 50-70 ft. lbs. – 9/16" = 70-90 ft. lbs.

1. Locate an area of the frame which has enough clearance to fit the mounting plate underneath and the compressor and tank on the inside side.
2. Thread both cross bars over the frame but underneath any wires or hoses to make sure nothing gets pinched or damaged.
3. Attach the large bracket to the underside of the frame using the long threaded rod, small washers and lock nuts. There will be a lock nut on both the top and bottom of the threaded rod.
4. Sandwich the 4 hole plate on one set of bolts underneath the large bracket, choosing whichever fits best with the vehicle.
5. Bolt the compressor to the 4 small holes in the plate using the hardware and silencer bushings included with the compressor.
6. After putting the correct fittings in the tank, bolt it to the top of the 4 hole plate as shown in the photos using the included 1/2" bolts.
7. Confirm there are no interferences and all bolts are torqued properly. Finish the compressor install, test drive and check regularly.

ATTENTION INSTALLER: BE SURE THE CUSTOMER RECEIVES THIS INSTRUCTION SHEET AND THE WARRANTY FORM.

Maintenance and Inspection:

Your Hellwig Suspension Product is built to last. However, as with all vehicle systems, it requires routine inspection. Inspect your Hellwig installation looking for secure hardware and tight fitting. If you do not perform this inspection, have your professional mechanic inspect as described.